




# Installation with Threaded Nut Covers for 33mm Wheel Lug Nuts

A minimum of 3 threads extending through the top of each nut is required for installation  
Item Numbers: 10305, 10306, 10307, 10308


## Front Axle Cover

1. For installation on an aluminum wheel, insert the enclosed plastic rim protector between the aluminum rim and the Front Axle Cover.
2. Align all 10 holes of the cover over the studs and wheel lug nuts.
3. Install 33mm threaded nut covers on each wheel stud by turning clockwise until tight. Nut covers should now be secure on each wheel stud.

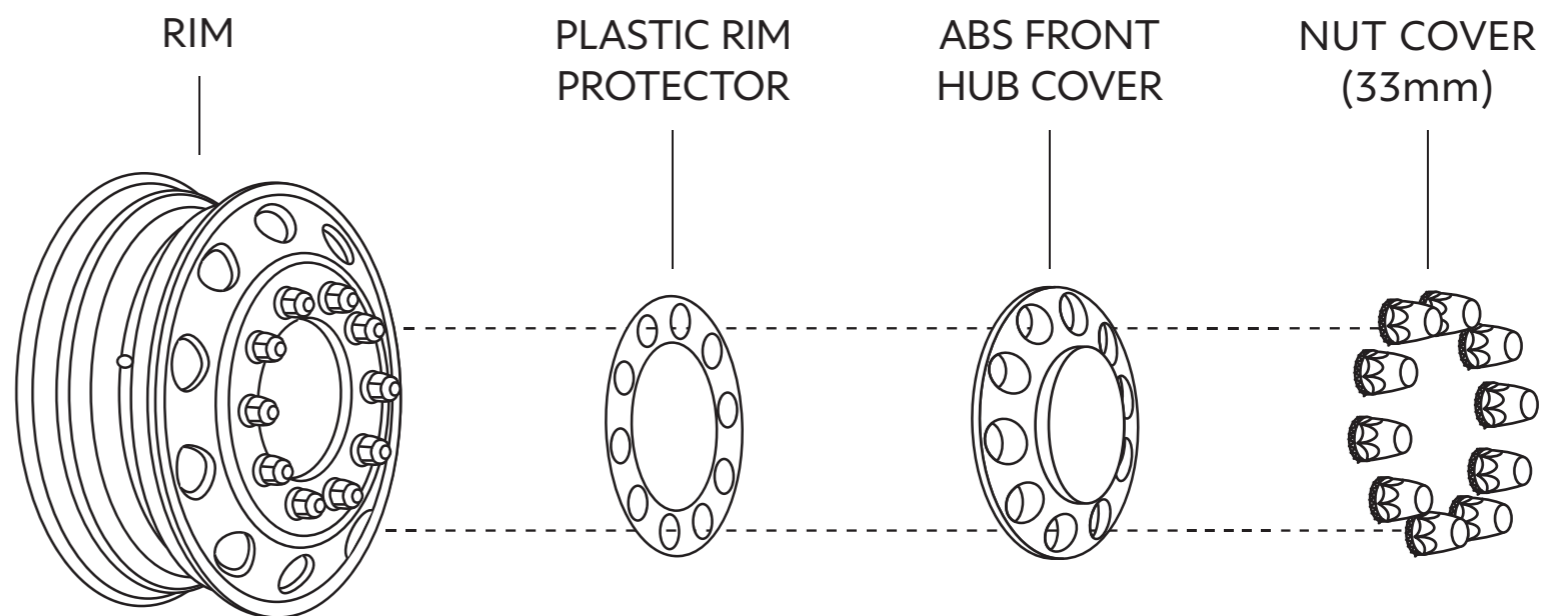

## Rear Axle Cover

1. For installation on an aluminum wheel, insert the enclosed plastic rim protector between the aluminum rim and the Rear Axle Cover.
2. Align all 10 holes of the cover over the studs and wheel lug nuts.
3. Install 33mm threaded nut covers on each wheel stud by turning clockwise until tight. Nut covers should now be secure on each wheel stud.

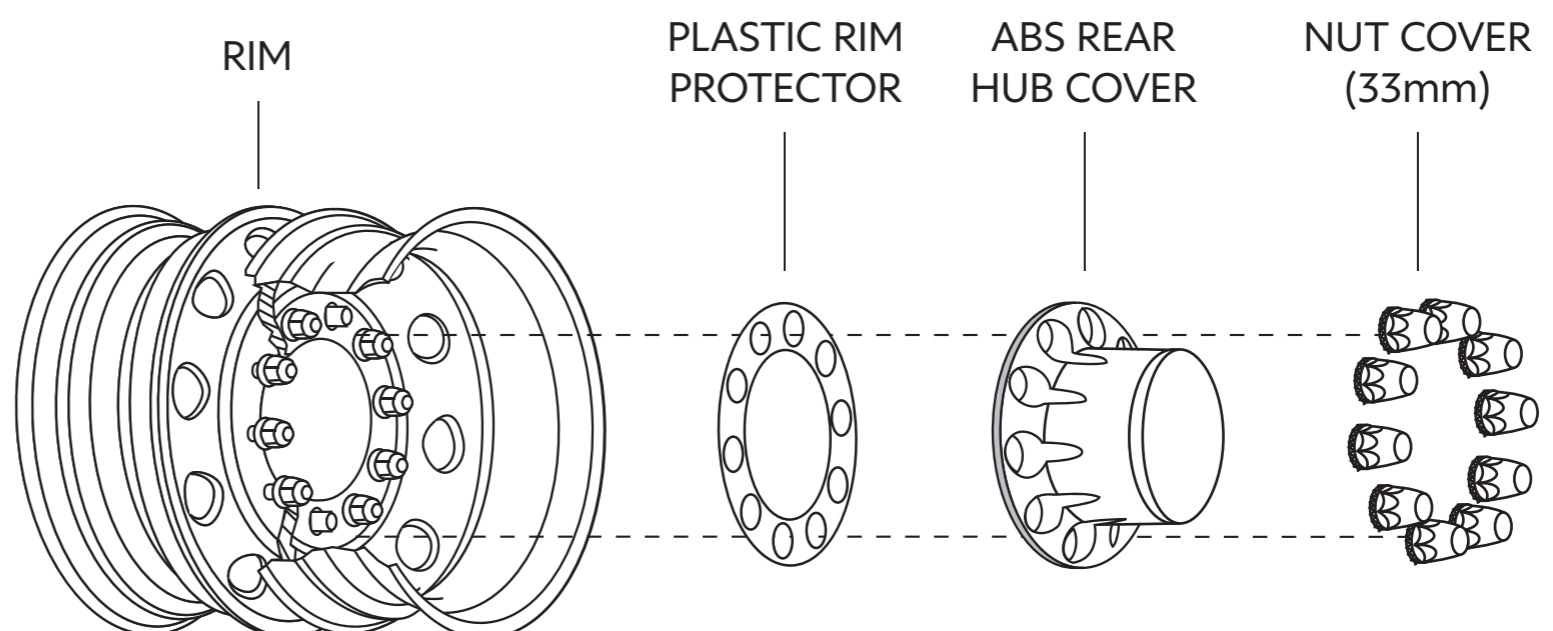

**CAUTION:** The Plastic Rim Protector must be used when this product is placed on any aluminum rim to prevent cosmetic damage on the soft aluminum rim. United Pacific shall not be responsible for improper installation of the product.