




United Pacific

# FRONT AXLE COVER KIT

Item # 10241 / 10252 / 10336 /10341

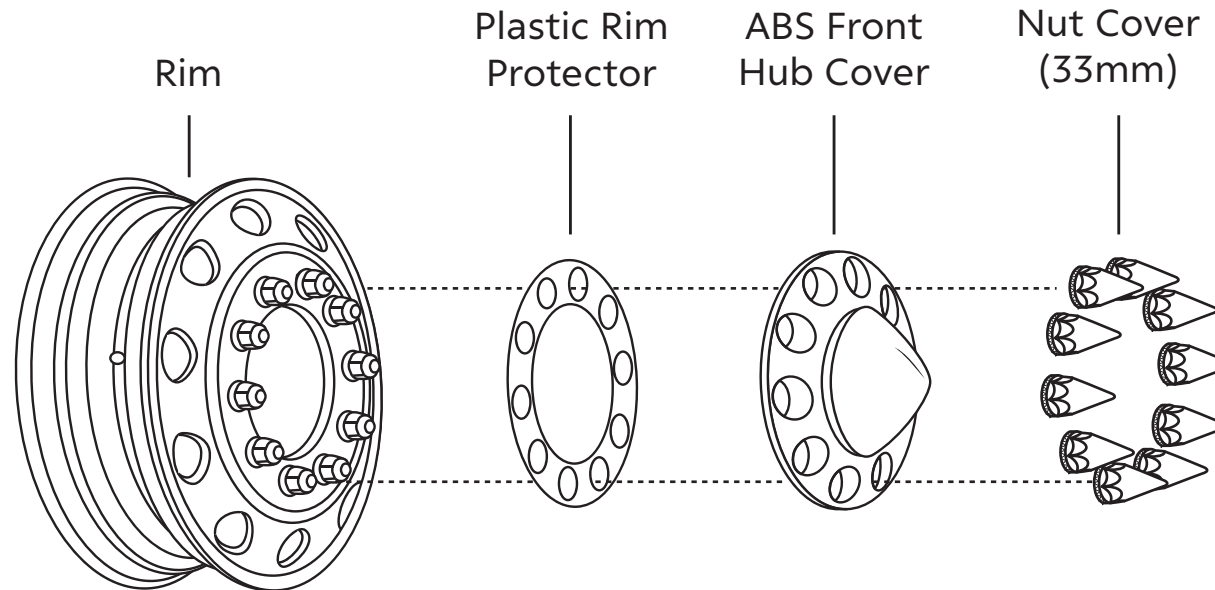

---

## Front Axle Cover Installation

Requires a minimum of 3 threads extending through the top of each nut is required for installation

1. For installation on an aluminum wheel, insert the enclosed plastic rim protector between the aluminum rim and the Front Axle Cover.
2. Align all 10 holes of the cover over the studs and wheel lug nuts.
3. Install 33 mm threaded nut covers on each stud by turning clockwise until locked. A clicking sound should occur.  
Nut covers should now be secure on each nut.

**CAUTION:** The Plastic Rim Protector must be used when this product is placed on any aluminum rim to prevent cosmetic damage on the soft aluminum rim. United Pacific shall not be responsible for improper installation of the product.