




United Pacific

# AXLE COVER COMBO KIT

Item # 10317 / 10318

## Front Axle Cover

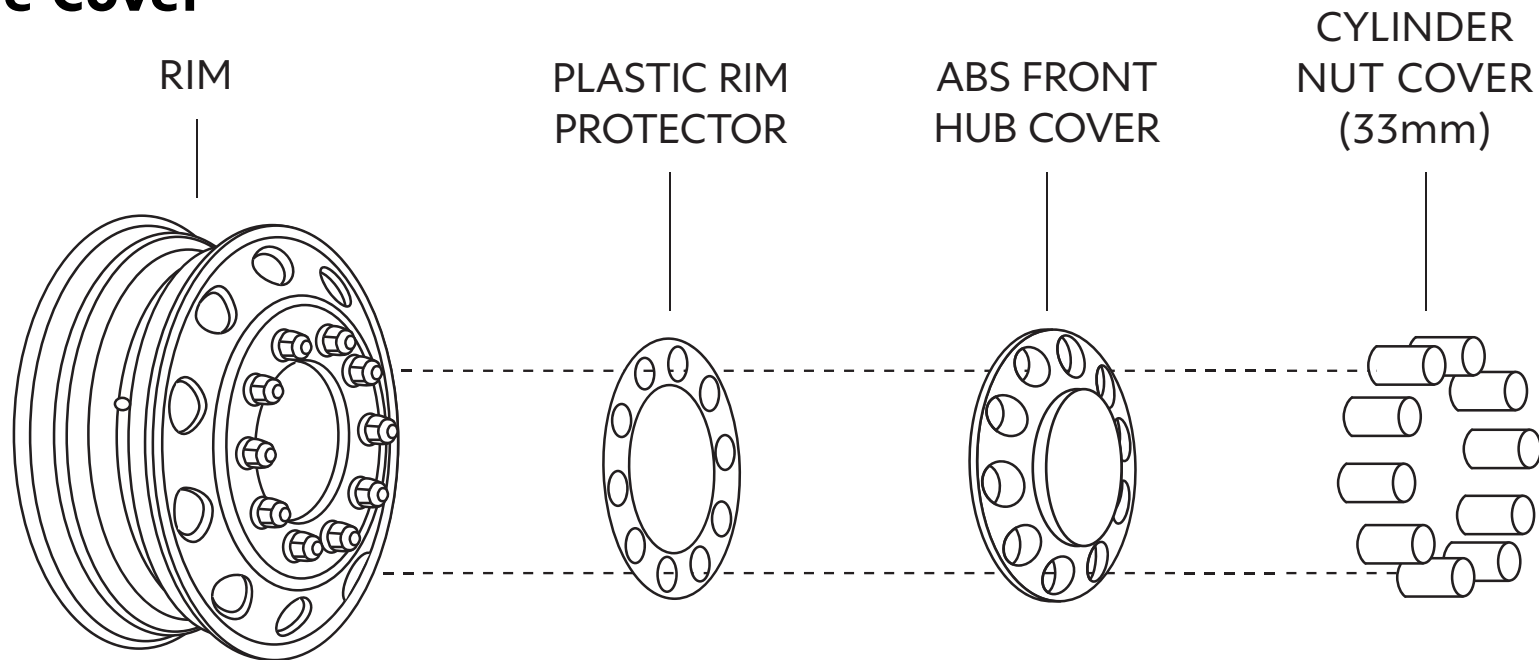

---

### ***Installation with Threaded Cylinder Nut Covers for 33mm Wheel Lug Nuts***

A minimum of 3 threads extending through the top of each nut is required for installation

1. For installation on an aluminum wheel, insert the enclosed plastic rim protector between the aluminum rim and the Front Axle Cover.
2. Align all 10 holes of the cover over the studs and wheel lug nuts.
3. Install threaded nut covers on each wheel stud by turning clockwise until tight by hand only (use no tools). Nut covers should now be secure on each wheel stud.




United Pacific

# FRONT AXLE COVER KIT

Item # 10317 / 10318

## Rear Axle Cover

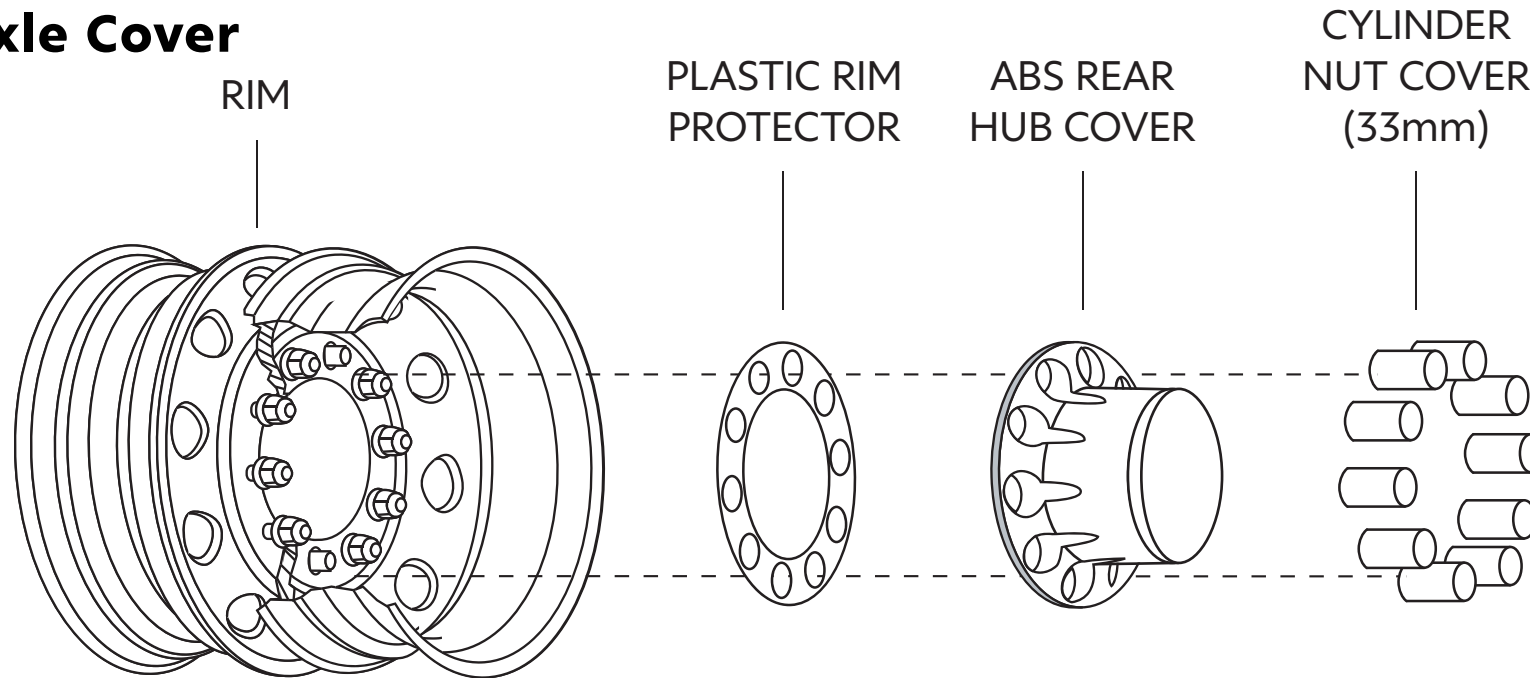

---

### **Installation with Threaded Cylinder Nut Covers for 33mm Wheel Lug Nuts**

A minimum of 3 threads extending through the top of each nut is required for installation

1. For installation on an aluminum wheel, insert the enclosed plastic rim protector between the aluminum rim and the Rear Axle Cover.
2. Align all 10 holes of the cover over the studs and wheel lug nuts.
3. Install threaded nut covers on each wheel stud by turning clockwise until tight by hand only (use no tools). Nut covers should now be secure on each wheel stud.

**CAUTION:** The Plastic Rim Protector must be used when this product is placed on any aluminum rim to prevent cosmetic damage on the soft aluminum rim. United Pacific shall not be responsible for improper installation of the product.