

41681/41682/41683/41684

Mirror Panels Removal Instructions

Tools Required:


- Trim removal tool
- Pliers
- Pick/hook tool

To remove large mirror panel:

1. Push on outside edge of mirror to expose screws



2. Unscrew both screws and slide mirror panel off mount (Locations marked in image below)

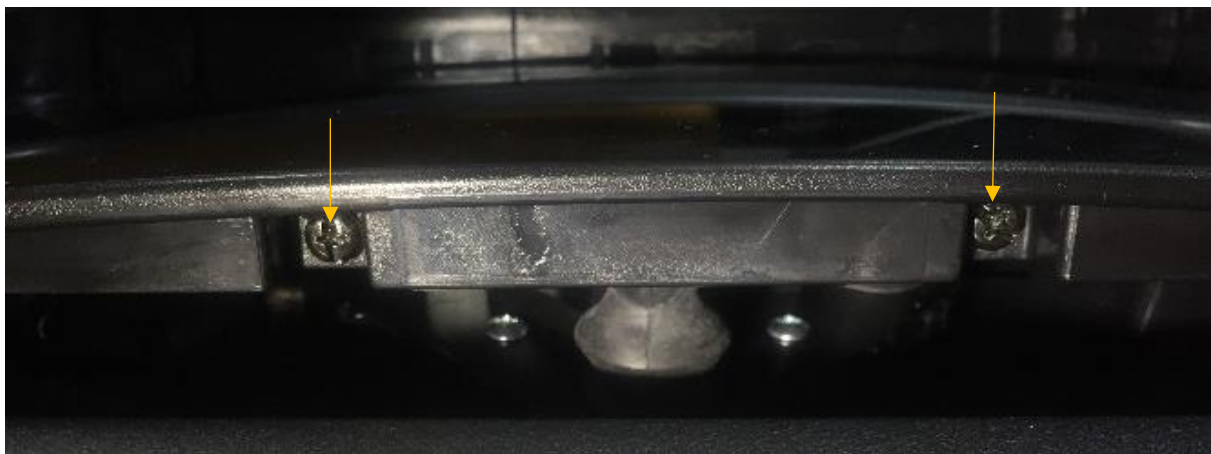

3. Unplug defroster wire leads and set panel aside. (41683 & 41684 only)



To re-assemble:

1. Re-plug defroster wire leads if needed (note: defroster leads are non-polarized)
2. Slide mirror panel onto mount
3. Screw in both screws



United Pacific

Page 2 of 5

11122020

Reliable. Hardworking. Quality Products.

To remove convex mirror panel:

1. Push in six tabs and pry back cover off using trim removal tool. Push edges of mirror around for access to tabs.
(Approximate locations of tabs are marked in image below)



Tip: Use pliers to push tabs and trim removal tool simultaneously to pry back cover.



2. Turn locking tab with pliers and pull mirror off. (Shown in image below)



3. Unplug defroster wire leads and set aside mirror panel. (41683 & 41684 only)

To re-assemble:

1. Re-plug defroster wire leads if needed.
2. Align all pieces for pivot mount and convex mirror panel and place in housing.
3. Pull locking tab through with pick/hook tool in hole (shown in image below) and turn with pliers to lock mirror in place.



4. Re-install back cover again.



United Pacific

Page 5 of 5

11122020

Reliable. Hardworking. Quality Products.